





ADAM BARBER CHAIR INSTRUCTION MANUELO





Parts and Tools



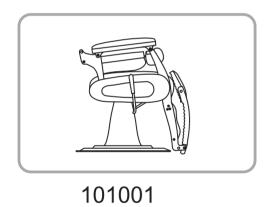


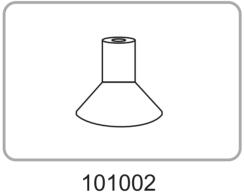

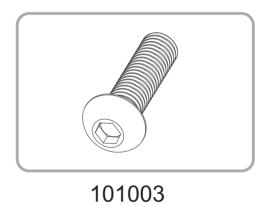


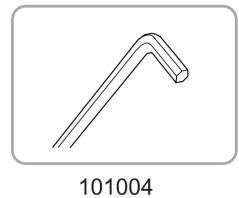




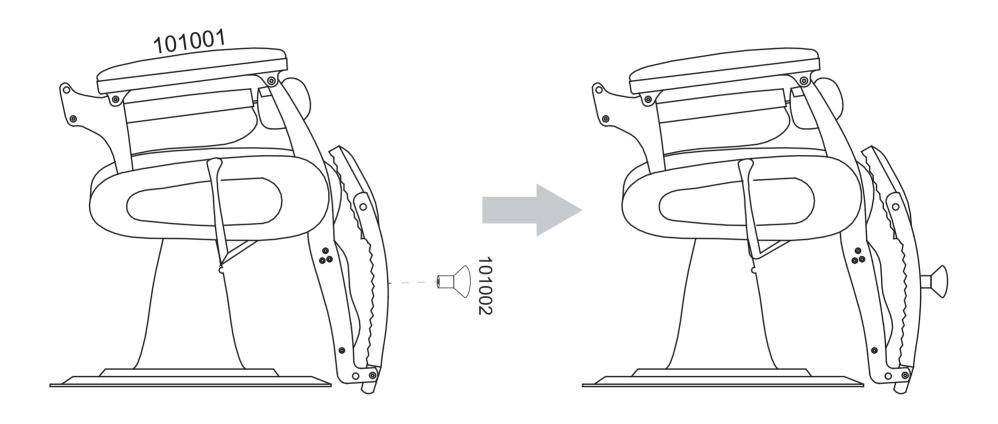



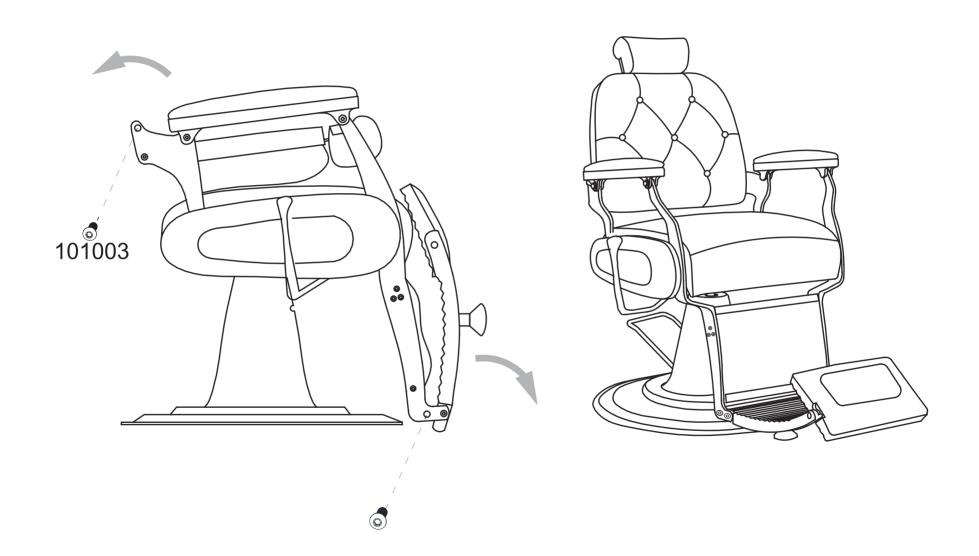



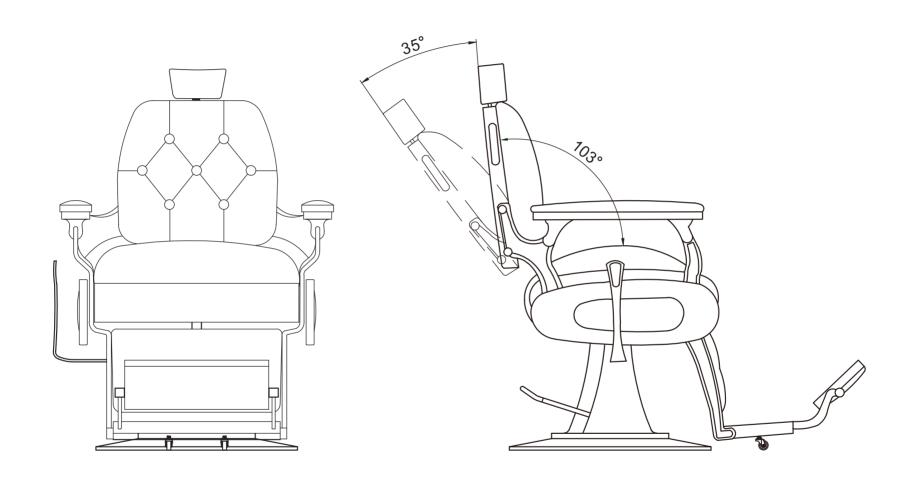









 Clean surface with damp cloth or use simple soap & water solution.



Avoid using corrosive clean-ing agents such as bleaches.

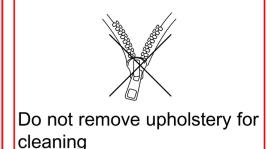

Warranty Coverage:

This warranty is valid for 12 months from the date of purchase. It covers technical problems that occur under normal usage conditions. Technical problems include, but are not limited to, manufacturing defects, hardware malfunctions, and software errors.

Exclusions from Warranty Coverage:

This warranty does not cover any damage or problems caused by user error. Situations not covered include, but are not limited to:

Accidental damage or misuse

Unauthorized repairs or modifications

Damage resulting from improper handling or storage

Issues caused by neglect or failure to follow the provided instructions

Damage due to external factors such as power surges, extreme environmental conditions, or natural disasters.

